


Tensioned Hold Down Device Instructions

Single Roller


**Please Note:** Screws provided are not suitable for all mounting surfaces. The installer is responsible for secure mounting using appropriate hardware for the site conditions. Consult with contractors and builders as needed.

1. Lift bead chain out of bead locking groove and slide tensioned hold down to bottom of chain loop.
2. Hold tensioned hold down in one hand while pulling plunger away from bead chain with other hand.
3. Pull tensioned hold down until bead chain is fully tensioned and move tension device up approx. 1/8" (3mm)
4. Mark screw hole locations with a pencil.



**INSIDE MOUNT**


If mounting directly onto the surface, pre-drill screw holes and then install the tensioned hold down using the 2 large screws provided.



**SIDE OR INSIDE MOUNT**

**A.** Align mounting bracket sight holes with pencil marks and attach bracket to mounting surface.

**B.** Press tensioned hold down onto mounting bracket posts and carefully install device using the two smaller provided screws with appropriate screwdriver.

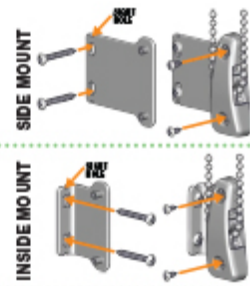


**FLOOR MOUNT**

**A.** Securely fix floor mount bracket to desired location.

**B.** Assemble tensioned hold down & chain.


**C.** Install bead chain so that plunger is 1/8" (3mm) below its top position.



Dual Roller


**Please Note:** Screws provided are not suitable for all mounting surfaces. The installer is responsible for secure mounting using appropriate hardware for the site conditions. Consult with contractors and builders as needed.

1. Lift bead chain out of bead locking groove and slide tensioned hold down to bottom of chain loop.
2. Hold tensioned hold down in one hand while pulling plunger away from bead chain with other hand.
3. Pull tensioned hold down until bead chain is fully tensioned and move tension device up approx. 1/8" (3mm)
4. Mark screw hole locations with a pencil.




**INSIDE MOUNT**

If mounting directly onto the surface, pre-drill screw holes and then install the tensioned hold down using the 2 large screws provided.



**SIDE/JAMB OR FACE MOUNT**

Align mounting bracket holes with pencil marks and attach bracket to mounting surface. Install tensioned hold down using the two smaller provided screws.

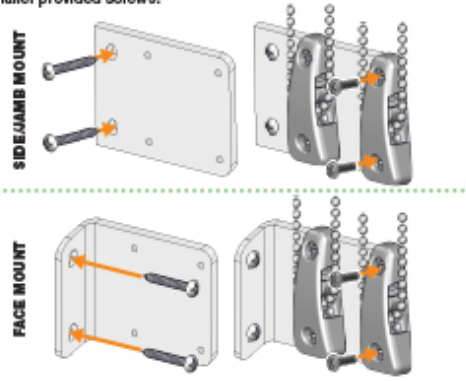

For more information go to <https://www.draperinc.com/?S=CHILDSAFETY>, or scan the QR code:

