
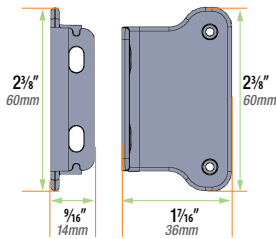
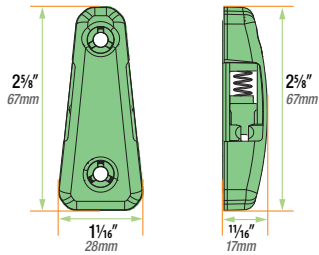





Tensioned Hold Down Installation Method on Sheetrock

Please Note: Use wood blocking and appropriate weight bearing fasteners (provided by others) if mounting to sheetrock.



Outside/Face Mount

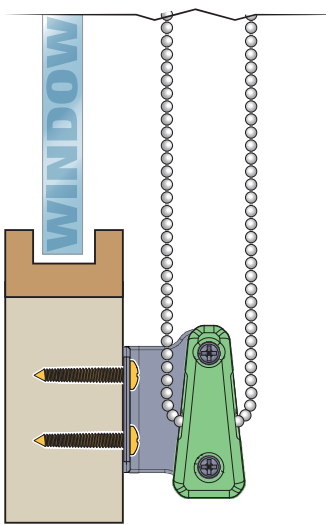

Side/Wall Mount

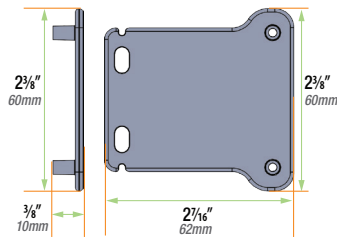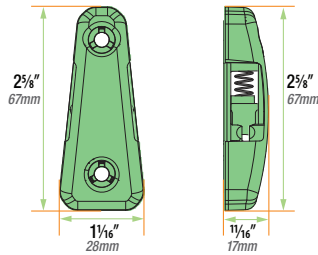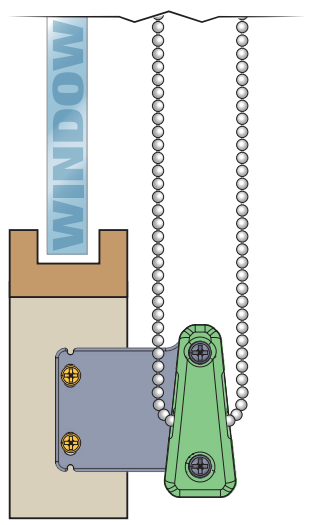

Inside/Jamb Mount

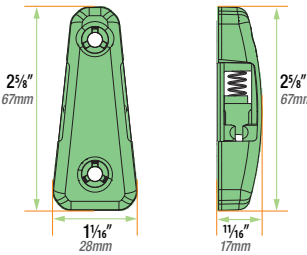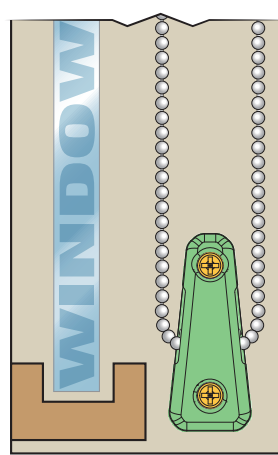

Sill/Floor Mount

